




## 850TC & 850 DIY KIT: BASE STRUCTURE PLANS

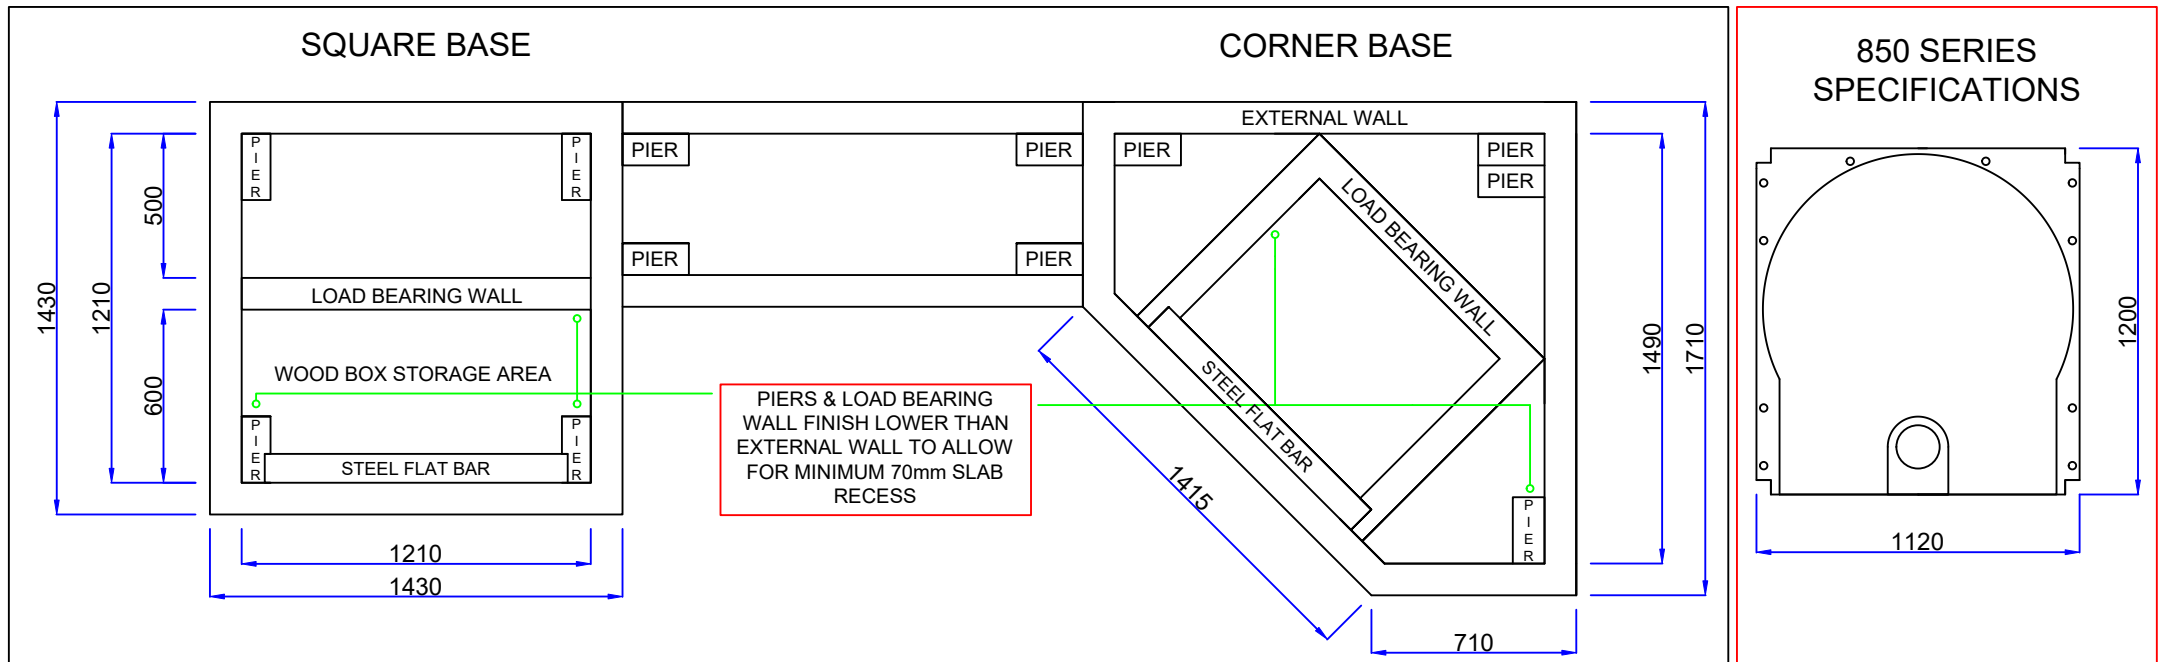

**NOTE:** MANY CUSTOMERS / BUILDERS WILL BUILD THE BASE, FORM AND POUR THE SLAB ON TOP OF THE OUTER SKIN OF BRICKWORK. THIS SHOWS ALL LAYERS (BRICKWORK, SLAB, BENCH TOP AND THEN OVEN). ELITE DO NOT RECOMMEND AS ITS NOT GREAT FOR WATERPROOFING OR A GOOD WAY TO FINISH.

ELITE RECOMEND THIS ABOVE METHOD BY USING THE BRICKWORK AS THE FORM WORK. IT HIDES ALL LAYERS WITHIN THE BASE AND THE OVEN FLOOR MEETS LEVEL WITH THE BENCHTOP. PLEASE VIEW THE 'SLAB AND BENCH STEPS' FOR EXPLANATION.